



60754 Universal Tree Chime Display

List of Parts


- Part 1** - Base w/ sleeve, 6 wing nuts and 4 caster wheels
- Part 2** - Male center pole
- Part 3** - Male/Female center pole
- Part 4** - Female center pole
- Part 5** - Four 14" middle arms
- Part 6** - Four 16" top arms

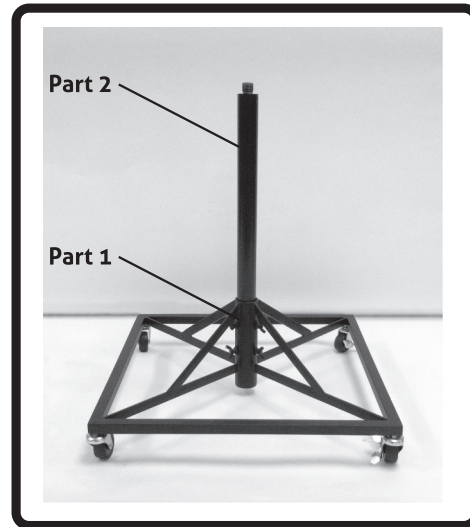


Step 1- Insert open end of part 2 into the center sleeve of part 1 and secure wing nuts on sleeve.

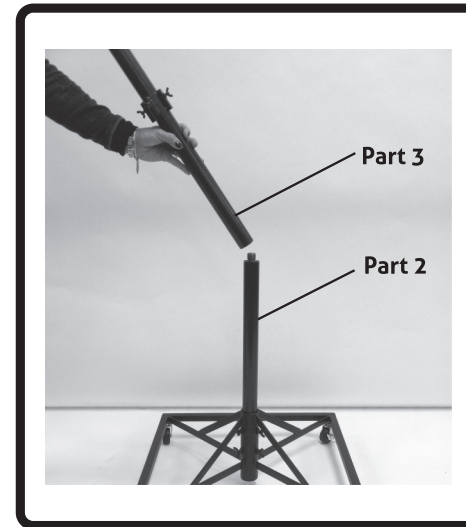


Step 2- Thread part 3 onto part 2.

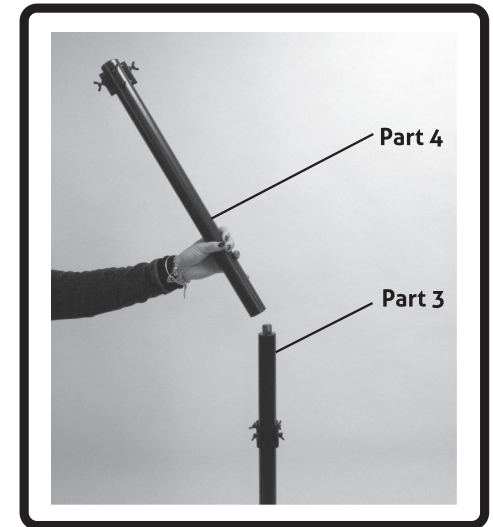


Step 3- Thread part 4 onto part 3.

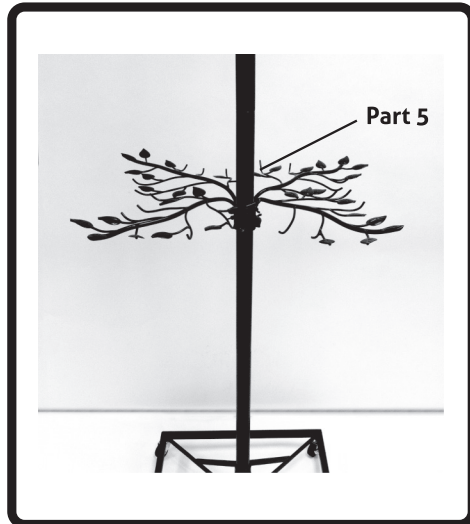

Step 4- Insert all four of part 5 into the slots in the middle of the center pole. Make sure to secure the wing nuts on the slots when done.

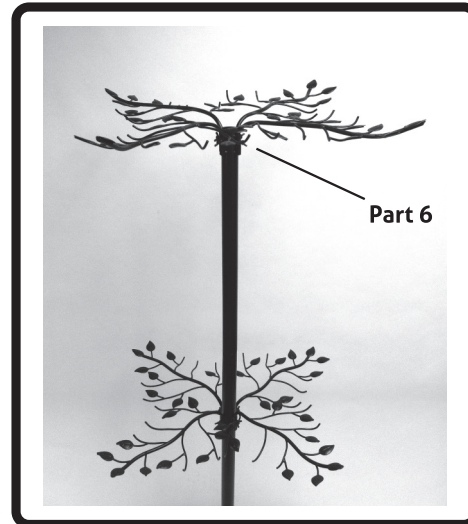

Step 5- Insert all four of part 6 into the slots at the top on the center pole. Make sure to secure the wing nuts on the slots when done.

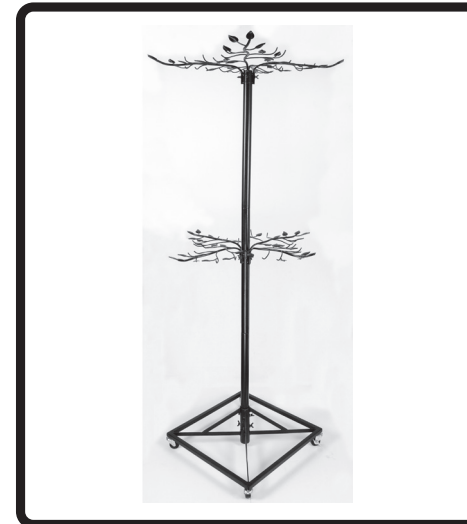

Final Assemble- Your display is now assembled and ready to be filled with Carson® product.

Note for Safety

- Only move display when empty.
- When full with product, make sure to lock the caster wheels.