
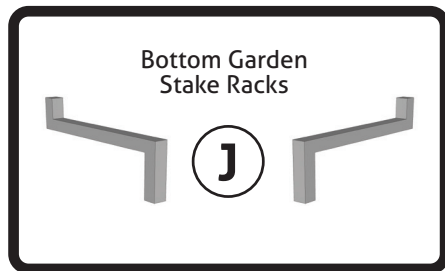
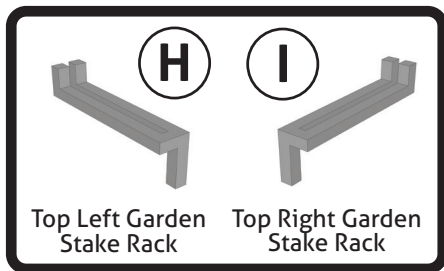


## 60791 Large Flag Display

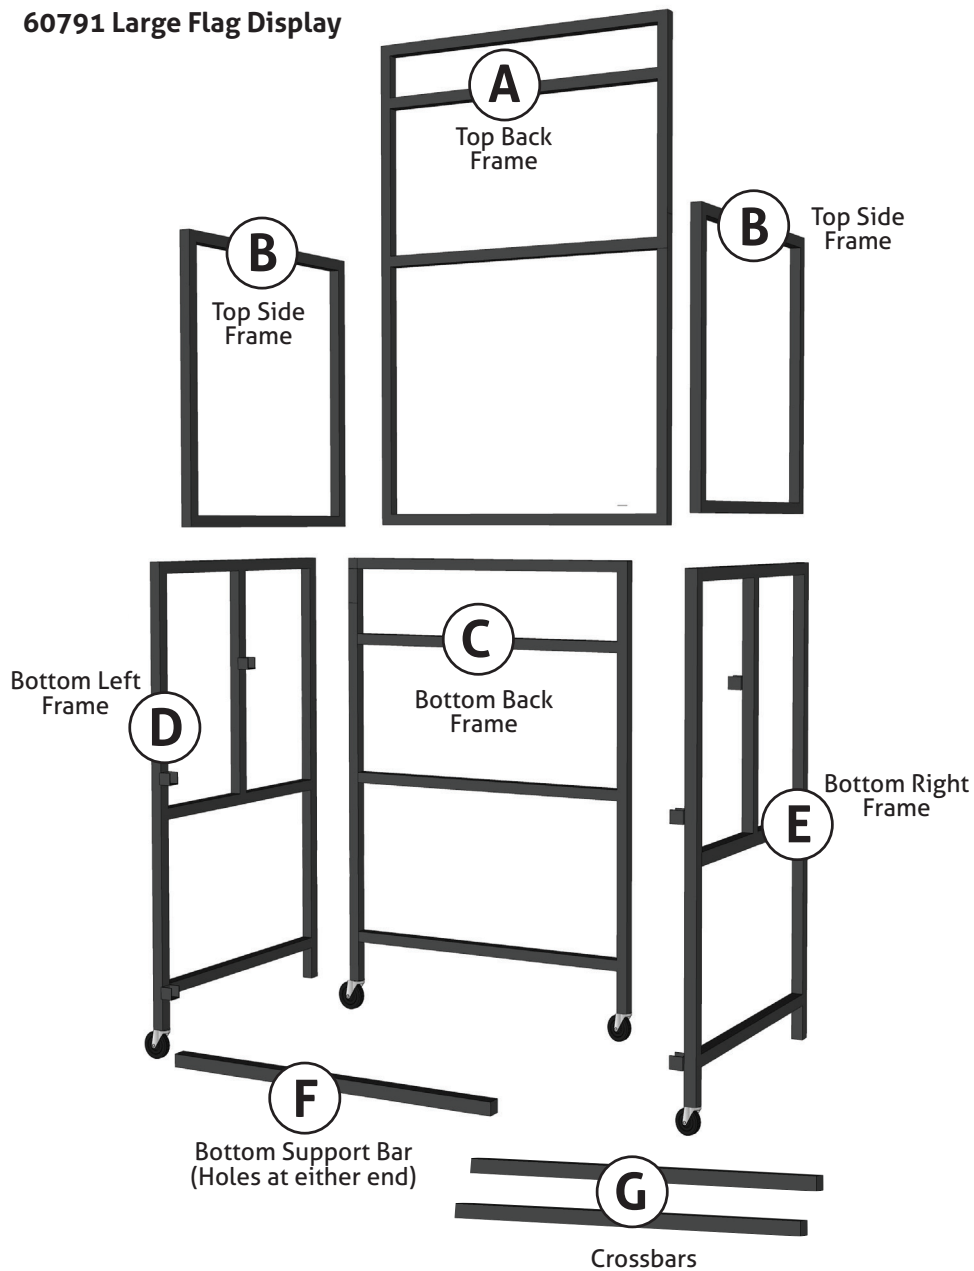

## List of Parts & Hardware

### Frame Pieces

Top Back Frame (A)  
 2 Top Side Frames (B)  
 Bottom Back Frame (C)  
 Bottom Left Frame (D)  
 Bottom Right Frame (E)  
 Bottom Support Bar (F)  
 2 Crossbars (G)  
 Wire Rack \*  
 Carson Logo Plaque \*

### Merchandising Pieces \*

2 Garden Stake Racks  
 2 Top Pieces (H & I)  
 2 Bottom Pieces (J)  
 4 Hangrails  
 6 Parallel Prongs  
 17 - 8" Hooks  
 30 Large Flag Arms  
 32 Garden Flag Arms

### Hardware

2 Wrenches  
 2 Short Bolts  
 14 Long Bolts & Nuts  
 4 Wing Nuts  
 (Pre-assembled)

\* See display photo on back for complete assembly

## Directions

1. Connect **Bottom Back Frame (C)** to **Bottom Left & Right Frames (D & E)** with 4 **Nuts/Bolts**. Be sure the slots for **Crossbars** are facing inward, and slots for **Garden Stake Racks** are facing outward. It is helpful to flip the frames upside down (wheels up) while completing this step.
2. Connect **Bottom Support Bar (F)** to **Bottom Left & Right Frames (D & E)** with 2 **Short Bolts**.
3. Insert 2 **Crossbars (G)** into interior slots between **Bottom Left & Right Frames (D & E)**.
4. Snap **Wire Rack** (not pictured) into place over **Bottom Support Bar (F)** and lowest crossbar of **Bottom Back Frame (C)**.
5. Connect **Top Back Frame (A)** to both **Top Side Frames (B)** with 4 **Nuts/Bolts**. Be sure holes are on the bottom of **Top Side Frames (B)** when assembled, and slots for **Garden Stake Racks** are facing outward.
6. Slide the **Carson Logo Plaque** into slot on back of **Top Back Frame (A)**.
7. Place the assembled top half of display on top of the assembled bottom half, and connect with 6 **Nuts/Bolts**.
8. Insert **Top Left & Right Garden Stake Racks (H & I)** into the slots on back of **Top Back Frame (A)**. Secure by tightening the wing nuts. Repeat beneath with 2 **Bottom Garden Stake Racks (J)**.
9. Insert 30 **Large Flag Arms** into both sets of holes along top 2 crossbars of **Top Back Frame (A)**. Direct the arms to hang over the interior of your display.
10. Insert 32 **Garden Flag Arms** into the holes along the middle crossbar of **Top Back Frame (A)**. Direct the arms to hang facing out toward the back of your display.
11. Hang 4 **Hangrails** on the outside of your display. For ideal weight bearing, it is recommended to hang these at the midpoint of your display and below.
12. To display flag poles, hang 6 **Parallel Prongs** from the top of either **Top Side Frame (B)** — whichever side of your display that will not hold **Hangrails**.
13. Fill the remainder of your display with 17 - 8" **Hooks** to suit your needs.

Your display is now assembled and ready to be filled with Carson® product!

60791 Large Flag Display

