



STEP 1

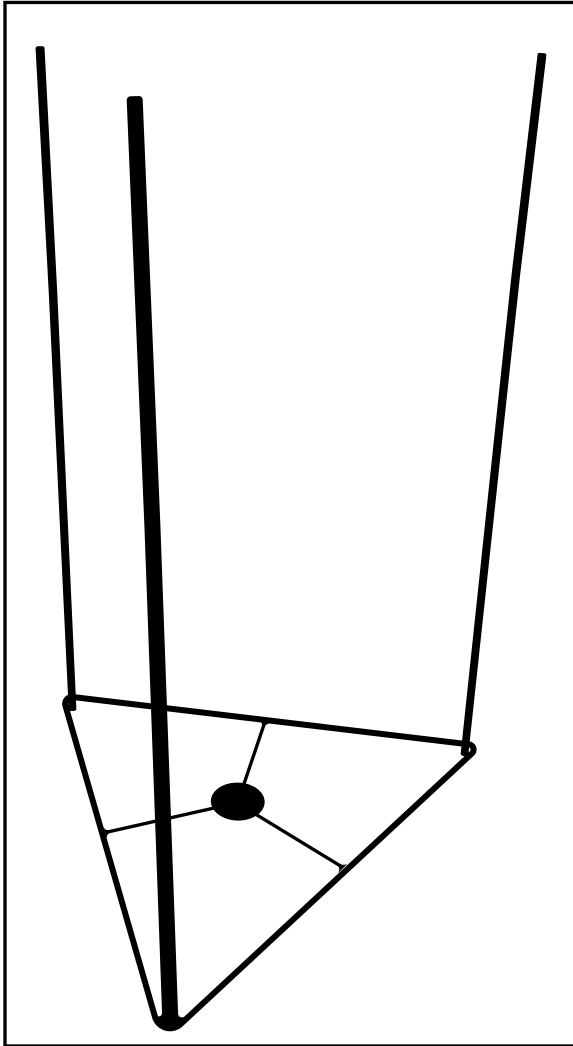

THREAD 3 STRAIGHT RODS
INTO TRIANGLE BASE


STEP 2

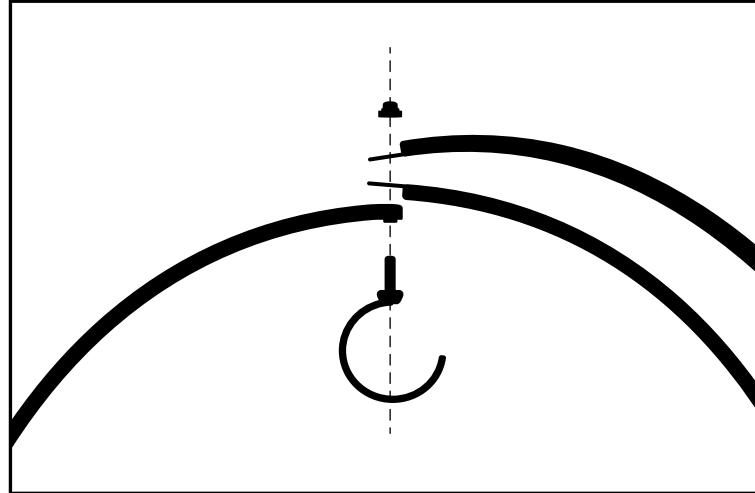

THREAD THE 3 CURVED RODS INTO
THE STRAIGHT RODS.
THEN ALIGN THE TOPS AS
ILLUSTRATED ABOVE.
SECURE CAP NUT ONTO HOOK
THREAD.

ASSEMBLY
INSTRUCTIONS FOR
ITEM #60744
LARGE CHIME DISPLAY

STEP 3

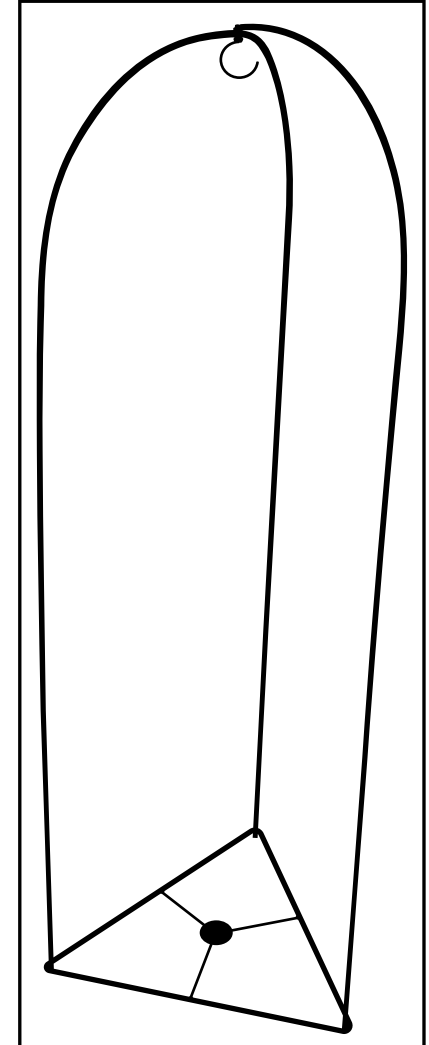

FINAL
ASSEMBLY