


PARTS LIST

- Part 1** Base w/ sleeve w/2 wing nuts (1)
- Part 2** Caster Wheels (4)
- Part 3** Open/Male metal tube (1)
- Part 4** Male/Female metal tube (1)
- Part 5** Open/Female metal tube (1)
- Part 6** 3-Arm Collar w/ 2 wing nuts (7)
- Part 7** 4-Arm Collar w/ 2 wing nuts (1)
- Part 8** Sign Holder (1)
- Part 9** 2-sided wooden Carson sign (1)


STEP 1

Thread Part 2 Casters (4) onto the attached bolts on Part 1. ***Secure with provided wrench ***

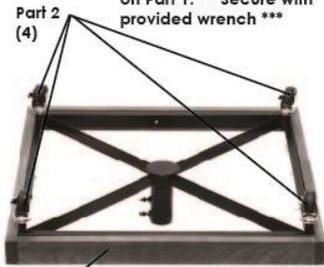

Part 1
Flip Part 1 over after wheels are secured so wheels rest on ground.


STEP 2

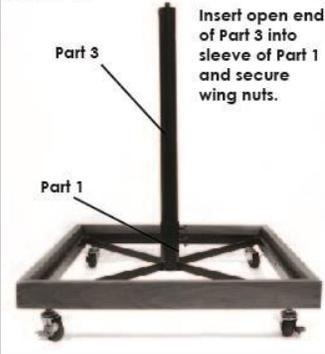

Insert open end of Part 3 into sleeve of Part 1 and secure wing nuts.

STEP 3

Thread Part 4 Female End onto Male End of Part 3.

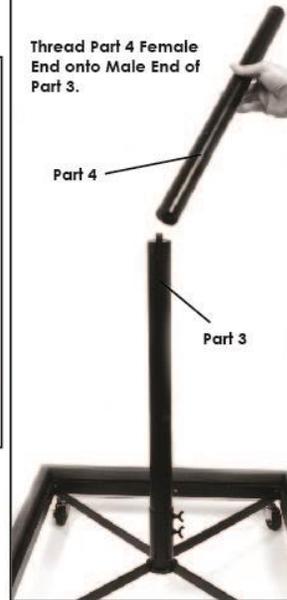

STEP 4



Thread Part 5 Female End onto Male End of Part 4.


STEP 5

Ensure the wing nuts on each of the collars on Part 6 are fully loosened to allow collar to slide freely down the tube.

Slide first of the 3 Arm collars (Part 6) down the tube towards the bottom. Once positioned, tighten the wing nuts on the collar.

Part 6 (1 of 7)
Repeat this step for each of the desired 3 Arm Collars to be placed on display, working from the bottom up.


STEP 6

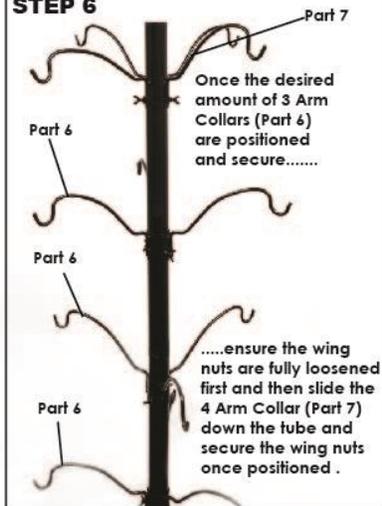

Once the desired amount of 3 Arm Collars (Part 6) are positioned and secure.....


.....ensure the wing nuts are fully loosened first and then slide the 4 Arm Collar (Part 7) down the tube and secure the wing nuts once positioned .

STEP 7

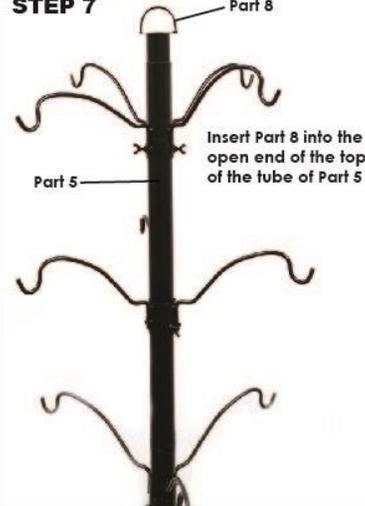

Insert Part 8 into the open end of the top of the tube of Part 5

STEP 8

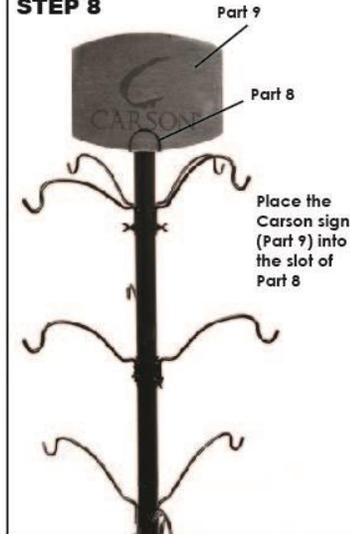

Place the Carson sign (Part 9) into the slot of Part 8

FINAL ASSEMBLY

Shown with 6 collars.

